



Roller Fly Screens

TEL: 0800 804 6378

Thank you for purchasing a roller fly screen, we are confident that you won't be disappointed with the quality and ease of installation. Your screen will have been delivered with all return springs, bearings and brakes, if selected, ready assembled. The 2 side guides will be separate but these simply slot onto the cassette in a matter of seconds.

Each roller fly screen order will come with the following components



Ready assembled cassette x 1



Screws or silicone



 
 
Side guides x 2



Screws and cover caps if face fitting

Roller Fly Screens

Your screen will arrive in 3 sections, the cassette will be ready assembled and the 2 side guides will be separate, simply slide the side guides onto the end of the cassette

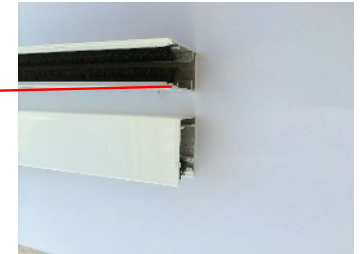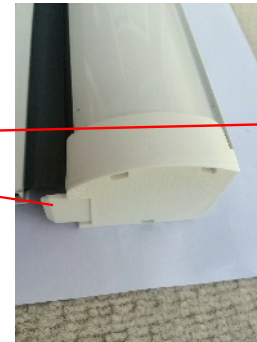

External

The side guides will have catches at the base, either the external catch or internal, whichever you have chosen.

The external catch faces into your room



Internal

The internal catch has 2 cut out slots in the base, make sure that these go nearest to the window as this signifies where the internal catch is located.

If you have opted for a base bar then this will need to be screwed onto the window frame to hold the screen in place.



Roller Fly Screens

FACE FITTING

This method of installation is when the roller screen is installed directly onto the window frame.

 
 
To install the roller fly screens onto the face of the window frame you have 2 options, either silicone or screw fit. To screw fit the screens you will need to drill 2 holes in the side guides ensuring the screw goes between the lugs.

Then using the screws and cover caps secure the unit to the window frame.

The silicone installation is described on the following pages.



The screen is fixed directly to the face of the window frame.

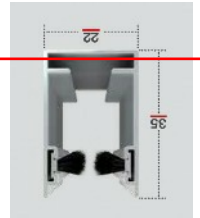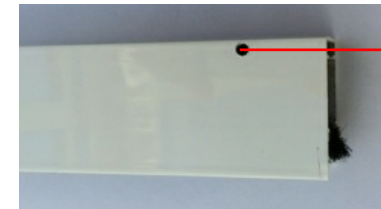

Roller Fly Screens

 
REVEAL INSTALLATION

This is when the screen is installed into the recess of the window, the screen can be set back away from the window or can be against the window frame, depending on your choice. If you were covering a large window opening with 2 openers you can set the screen back in the recess so that the screen can be operated with only one window open.

If you have opted for reveal install the end caps on the cassette will have expander springs inside. Simply compress the end caps offer into the reveal and then release.

The screen can then either be screwed into position or you can use silicone to secure in position.

If you are using screws to secure the screen then you will need to drill through the side wall of the guide and then secure to your wall with the supplied screws and wall plugs.

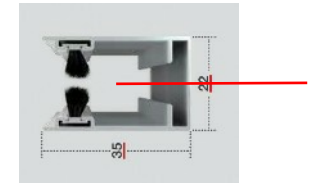


The side guide is fixed directly to the recess wall surrounding the window



Roller Fly Screens

 SILICONE INSTALLATION

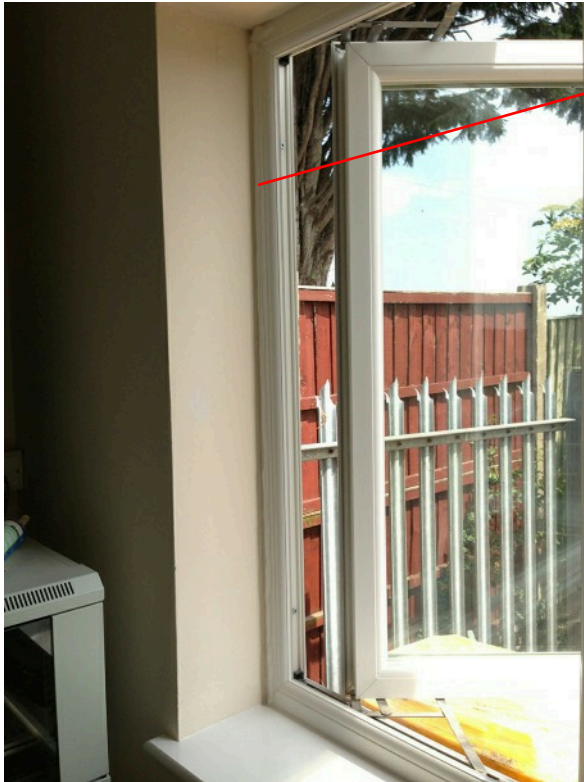


Run a 10mm bead of silicone around the top and sides of the window frame

Once the cassette and guides are slotted together offer them onto the window frame and push firmly to seal to the silicone adhesive, checking the operation of the screen once in place.

Don't worry if you need to adjust the screen as the silicone will stay flexible for around 20 minutes.

 If you ever need to remove the screen just run a sharp blade between the screen and frame, our supplied silicone will never set hard.

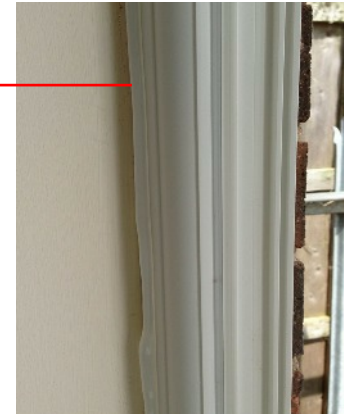

Roller Fly Screens

TEL: 0800 804 6378

BASE BAR

 
The base bar is used where there is no window cill to seal to. You will need to drill pilot holes into the rear of the bar and then use the self drill screws to secure to the window frame. You may need to drill a small pilot hole into the frame depending on the material.



Drill hole at rear



Use self drill screws to secure

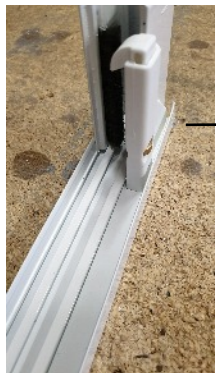

Side guide sits in base bar



Base bar

Roller Fly Screen Operation

 
We would like to thank you for purchasing the Premier roller fly screen. With over 20 years experience you can be assured that you have purchased a quality product that will provide a long lasting solution to helping prevent the ingress of flying insects, spiders and birds. We kindly ask that you read this sheet as it contains some important information for the safe operation of the screen.

Fly screens are designed to protect the ingress of flying insects and not to prevent people, pets or objects from gaining entry or from falling out of an opening.

OPERATION OF THE SCREEN

The roller cassette is a spring retraction operated insect screen. To put the mesh in position pull downwards on the handles or centre pull cord and when the pull down bar meets with the window sill ensure that the bar sits behind the end stop catches. To release keep hold of the base bar and gently move it away from the catches and let it retract keeping hold of the bar, handles or cord at all times until it has full retracted.

For doors it is the same operation but it will lock onto the magnetic strip instead of the catches.

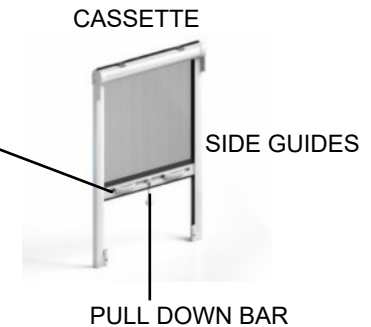

SAFETY

The spring retraction cassette is recommended for operation by adults as the force of the retraction could cause harm if the base bar is released before being fully retracted. **DO NOT ALLOW CHILDREN TO OPERATE OR PLAY WITH THE SCREEN.**

Please do not allow small children to operate the screen or play with the pull cords as these are a choking hazard. These cords are best removed by simply cutting of or shortening, if there is a chance of children tampering with them.

Roller Fly Screens

TEL: 0800 804 6378

PRODUCT NAME - Roller Fly screen - PREM40

GENERAL - This is a spring loaded retractable fly screen. The mesh is PVC coated fibreglass and the casings are polyester coated Aluminium.

CLEANING - To clean the casings use a non abrasive general purpose cleaning agent. The mesh should be vacuumed on a weekly basis to remove any dust and pollen and the tracks should be vacuumed weekly to remove any debris or foreign objects that could impede the retraction of the mesh. If there is any build up of grease on the mesh then our specialist cleaning fluid PRC should be used.

WARRANTIES - Three years on all casings, 1 year on internal springs if the screen is fitted externally and 2 years if fitted internally. The mesh is excluded from this warranty unless it is a manufacturing fault which would become apparent after a few operations of the screen.